

Crazy8eats | Play Mode

Change Pattern	Reset/Clear All Patterns
Selected voice only: Press any pad All voices at once: hold shift + any	Press Encoder down while starting the machine
Mute/Unmute	Press encoder for 1 sec. Pads 1-8 Mute/Unmute voices
Skip/Jump	hold skip and press any pad, release skip to resume

Crazy8eats | Chaining

top pads select the voice

bottom pads select chain step

1 2 3 4 5 6 7 8

Change pattern in slot

enable chain steps	hold rec and press bottom pads to toggle on/off
assign pattern to step	press a bottom pad to select, then turn encoder

Crazy8eats | Tools

direction of the track. ▶forward, ◀reverse, ▶◀pendulum, 🎲random

values 1-4 reduce trigger probability per step. 5=unchanged.
6-8 randomly replaces steps with other patterns (auto remix)

track rate multiplier

mode* crazy* drill rate* swing* copy* paste* clear*

tools on/off

8 levels of swing

hold drill and light any bottom pad to create pattern then release drill and press and bottom pad to drill turn encoder to change drill rate

*tool affects all voices at once when shift is held

Crazy8eats | Edit Mode

Punch Record	
When rec is lit you can punch in beats. Auto-quantized shift+ any pad clears the recording of that voice (1-8) shift+rec clears the entire pattern (all voices at once)	
Skip	hold skip and press any pad to skip steps (shorter pattern)
Accent / Modulation	hold any pad and use encoder to adjust the modulation value of that step. holding shift changes the value in finer increments

Crazy8eats | MIDI Setup

Enter setup: hold encoder + shift 4 seconds. Exit setup: press encoder

Press a pad to select voice then send MIDI notes to "learn" the note

run	rec	midi out1	1	2	3	4	5	6	7	8
		midi out2	1	2	3	4	5	6	7	8

When Lit voice sends MIDI CC

When Lit selected voice sends velocity

sets MIDI channel

Crazy8eats | Global Functions

Select Voice	roll encoder to select any voice 1 to 8
Tempo	hold tempo + to increase/decrease, or tap tempo
SYSEX Dump	▲ at startup
SYSEX Receive	▼ at startup